

Korg Pa600SG Sounds & Styles Installation Guide

1 Downloading of Firmware


1) Download the latest firmware from the link below and unzip the contents into an empty thumbdrive's root directory - http://www.citymusic.com.sg/webshaper/pcm/files/KORG_Pa600SG_V2_SET_090716.zip

Do not rename or edit any of the files or folders in the zip file. NOTE: If your Pa600SG already comes with the SD card installed and you wish only to update to the latest firmware, skip to step 5.

2 Remove the lid of the SD card slot

1) Shut down your Pa600SG, disconnect the power cord and any other cables connected to your Pa600SG to prevent any unexpected damage during installation.

2) Remove the screw on the lid of SD card slot, located at the back of the keyboard. Remove the lid and keep both the screw and the lid in a safe place. You should now see the SD card slot below the battery.

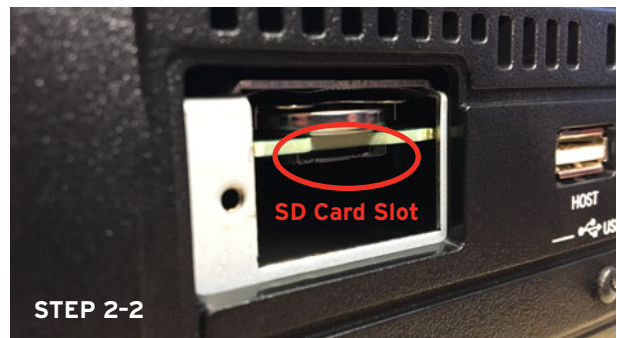

3 Inserting the SD card

1) Hold the microSD Card with your index finger and thumb holding the sides of the card at all times. Never touch the exposed copper pins of the card with your bare hands.

2) With the SD Card sticker label facing up, push it in to the slot as shown in the picture with the highlighted circle, you should hear a "click" sound.

3) Put the lid of the SD card slot back into place and tighten the screw in a clockwise direction.






4 Turn on the Pa600SG

1) Plug the power cord in and turn on the Pa600SG. Do not touch the keyboard or unplug the power while it is loading.

Korg Pa600SG Sounds & Styles Installation Guide

5 Installation of new or updated Pa600SG Firmware


- 1) Insert the thumbdrive with the latest Firmware into the USB slot.
- 2) Press the "MEDIA" button.
- 3) Press "Load" on the touchscreen as shown, followed by the dropdown arrow beside "Disk", and select "USB".
- 4) Select the firmware file "KORG PA600SG V2.SET" and press the "Load" button.
- 5) Press "Yes" to confirm the installation. Do not touch the keyboard or unplug the power during this process.

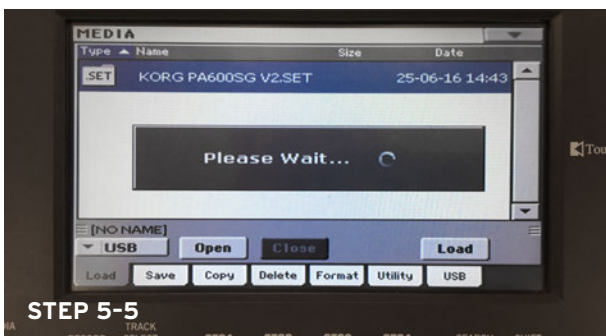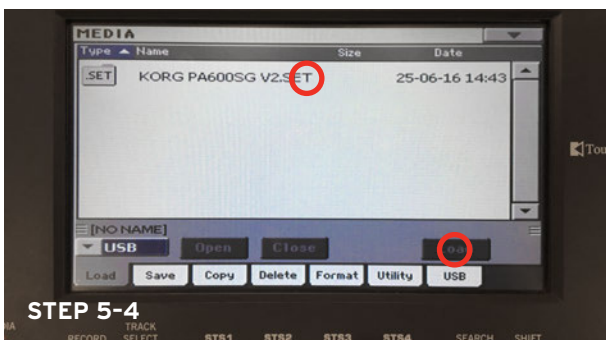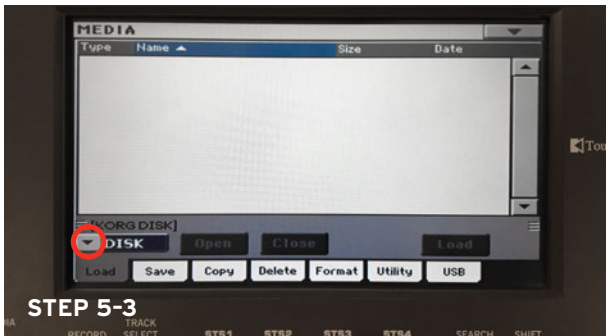

Korg Pa600SG Sounds & Styles Installation Guide

6 Locating the Sounds

For the ethnic instrument sounds, press the "Sound Edit" button on the left side of your Pa600SG, and access the instruments menu by pressing the "SND" tab on the screen, touch the "User" tab on the top, then select the desired instrument. More ethnic instruments are available in the next few pages as well as User Banks.

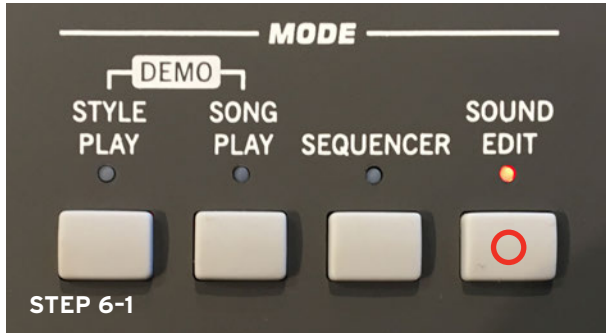

USER 1 : PAGE 1 (CHINESE)	
RUAN (SW1/S)	DIZI 2 (SW1/JS)
YANGQIN (SW1/JS)	GUZHENG (SW1/JS)
SANXIAN (SW1/JS)	LIUQIN (SW1/JS)
DIZI (SW1/JS)	PIPA (SW1/JS)

USER 1 : PAGE 2 (CHINESE)	
YANGQIN REVERSE	
ERHU (SW1/JS)	
RUAN 2	

USER 2 : PAGE 1 (MALAY)	
CHAKLENGPONG	SERULING (SW1/JS)
SERUNAI	GAMBUS
ANGKLUNG SINGLE	BIOLA
ANGKLUNG GROUP	AKORDION

USER 2 : PAGE 2 (MALAY)	
ANGKLUNG 2 (SW/JS)	
SERULING 2 (SW/JS)	
CHAK & GAMELAN	

USER 2 : PAGE 9 (INDIAN)	
NADHASWARAM	VEENA
BANSURI-EB	HARMONIUM 1
BANSURI 2	HARMONIUM 2
TAMBURA 1	SANTOOR 1


USER 2 : PAGE 10 (INDIAN)	
SURBAHAR	
SITAR	

USER DK : PAGE 1 (ETHNIC DRUMKITS)	
MALAY PERC	CHINESE KIT 1
INDIAN PERC	CHINESE KIT 2
CHINESE DRUMS	INDIAN DRUM KIT 2
CHINESE DRUMS 2	

Korg Pa600SG Sounds & Styles Installation Guide

7 Locating the Styles

 For the ethnic musical styles, press “Style Play” button on the left side of your Pa600SG and access the styles menu by pressing the “STYLE” tab on the screen, touch the “Fav/User” tab on the top, then select the desired style. More ethnic styles are available in the next few pages as well as User Banks.

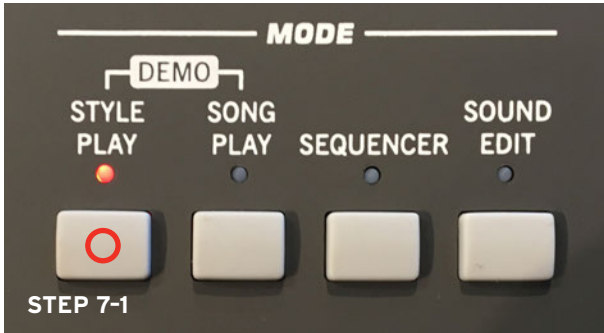

CHINESE : PAGE 1	
KUNGFU 1	GETAI
SHANGHAI	LION DANCE
WO AI NI	KUNGFU 2
DYNASTY	NORTHEAST FOLK

CHINESE : PAGE 2	
NORTHEAST POP	CHINESE SPRING 1
70's CHINESE	CHINESE OPERA 1
CHINESE THEATRE	CHINESE OPERA 2
GUZHENG ENSEMBLE	TIBETIAN FOLK

CHINESE : PAGE 3	
CHINESE SPRING 2	SILK ROUTE
CHINESE BALLAD	CHINESE BALLAD 2
CHINESE 8 BEAT 1	CHINESE SPRING 3
CHINESE GALLOP	CANTON FOLK

CHINESE : PAGE 4	
JIANGNAN FOLK	CANTO 1
CHINESE SPRING 4	OFFBEAT CHA-CHA
CHINESE EVER GREEN	CNY 1
GREAT WALL	

MALAY : PAGE 1	
MALAY ASLI	KERONCONG
ZAPIN	MINANGKABAU
JOGET	DONDANG SAYANG
KPAK BING BING	DIKIR BARAT

MALAY : PAGE 2	
INANG	HARI RAYA 2
DANGDUT	HARI RAYA 3
JAVANESE	HARI RAYA 4
HARI RAYA 1	DANGDUT INIL

INDIAN : PAGE 1	
BHANGRA	DEEPAVALI
BOLLYWOOD 1	
BOLLYWOOD 2	
KOLLYWOOD	